

IT

EN


FR

NL

DE

ES

PT

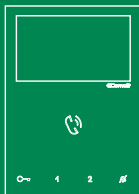

## Art. 6721W - 6721W/BM

Manuale utente Mini vivavoce

User manual Mini Handsfree

Manuel d'utilisation Mini mains libres

Gebruikshandleiding Mini handsfree


Benutzerhandbuch Mini Freisprechfunktion

Manual de uso Mini manos libres





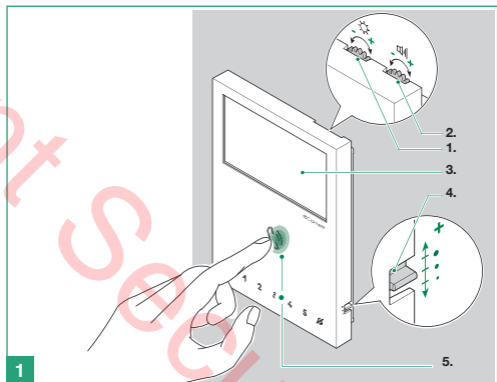


Manual de utilização Mini alta voz

[www.comelitgroup.com](http://www.comelitgroup.com)

 Comelit®



1


- (IT)** ▶ Premere il tasto di attivazione della fonica  per rispondere alla chiamata in entrata.
- (EN)** ▶ Press the soft-touch audio activation key to answer  incoming call.
- (FR)** ▶ Appuyer sur la touche à effleurement d'activation de la phonie  pour répondre à l'appel en réception.
- (NL)** ▶ Druk op de aanraaktoets voor activering van de audio  om de binnenkomende oproep te beantwoorden.
- (DE)** ▶ Die berührungsempfindliche Sprechaste  berühren, um den eingehenden Anruf anzunehmen.
- (ES)** ▶ Pulsar la tecla táctil de activación del audio  para responder a la llamada entrante.
- (PT)** ▶ Premir a tecla táctil de ativação do som  para responder à chamada recebida.

## Monitor description (Pic. 1)

1. Brightness control
2. Loudspeaker volume control
3. 4.3" LED colour screen
4. Call volume adjustment (high - medium - low)
5. Keys

## Key description

- ▶ Press the desired key to activate the function associated with it.

 Wait for approximately 1 sec. before pressing the same key again.



**Audio** activation key / **Hands-free** mode\* enabling

- ▶ Press and hold to enable/disable the Hands-free mode.



**Lock-release** key

1 Key 1 **Actuator** function\* (Default)

2 Key 2 **Self-ignition** function\* (Default)

- ▶ Press and hold to enable/disable the function.

345

**Additional keys**

Art. 6734W Kit with additional keys sold separately



**Privacy\*** key

## Indicator LED description



*Steady LED (with call):*

audio activated

*Steady LED (idle):*

Hands-free mode activated

*Flashing LED:*

incoming call



*Flashing LED:*

call in progress

*1 flash after pressing:*

door opening confirmation



*4 flashes:*

system engaged

*Steady LED:*

Privacy function enabled

*3 flashes (every 5 sec.):*

Doctor \* function enabled

- ▶ To enable/disable the Doctor function press and hold the key programmed for this function\*.

\* For further information please contact your installer.